

Part No. HR-8063-2

Follow installation instructions on back of package.

How to read your meter: .1= 6minutes. 1=1 hour.

Operation Instructions: Press and release button to toggle between Hours, Number of starts, TMR1 (trip meter) & TMR2 modes.

To See Number of Engine Starts: In hour meter mode (hour glass icon on left side of screen) hold button down. Screen will display the number of Engine Starts.

Hour Meter Mode: The default screen of your meter is total hours accumulated. This can not be erased. The hour glass icon will blink slowly when recording hours when properly installed.

Timer Mode (TMR1): This screen is an hour meter that is Resettable. To reset Timer hold button down while in TMR1 mode until screen blinks and resets to zero.

Timer Mode (TMR2): This screen is an hour meter that is Resettable. To reset Timer hold button down while in TMR2 mode until screen blinks and resets to zero.

Total numbers of hours is cumulative and can not be errased.

Use included log book to track service and maintenance.

Tip: Use TMR1 or TMR2 for rebuilds or major changes.