

INSTALLATION INSTRUCTIONS
Billet Footpegs for 18-20 STACYC® eDRIVE.



Part No. NSP-HL-18-20
Fits STACYC® 18-20 eDRIVE.



Made for Enthusiasts by Enthusiasts!

Danger

When Using Billet Footpegs...

DO NOT INSTALL IF YOU ARE UNSURE ABOUT INSTALLATION STEPS OR THE REQUIRED TOOLS OUTLINED IN THESE INSTRUCTIONS. HAVE AN AUTHORIZED DEALER INSTALL BILLET FOOTPEGS FOR YOU. READ ALL OF INSTRUCTIONS BEFORE STARTING INSTALL.

KEEP FEET ON FOOTPEGS AT ALL TIMES TO AVOID RUNNING OVER YOUR FEET.

DO NOT ride without adult supervision.

DO NOT ride bare-footed.

DO NOT ride without proper safety equipment. (Always wear helmet, pants, shirt, gloves, and boots.)

DO NOT hit or run into objects with Billet Footpegs, this may cause damage or injury to the rider and the bike.

DO NOT ride more than one person at a time.

DO NOT modify the Billet Footpegs.

Use soft soap and water to clean footpegs. Rinse thoroughly.

**DISCONTINUE USE IF ANY PART IS BENT, BROKEN OR MISSING
INSPECT BEFORE AND AFTER EVERY USE.**

**FAILURE TO USE THIS APPARATUS CORRECTLY CAN
RESULT IN SERIOUS INJURY OR DEATH. ONLY USE
BILLET FOOTPEGS FOR ITS INTENDED PURPOSE.**

Installing Foot Pegs Stacyc® model 18-20 edrive

Tools required: No. 2 Phillips Screwdriver, 5mm. Allen Wrench, Hacksaw or Jig Saw, Blue Loctite®



No. 2 Phillips Screwdriver.



Hacksaw.




5mm. Allen Wrench.

Parts Included.



x2 pcs.
6x1mm Allen Bolts.

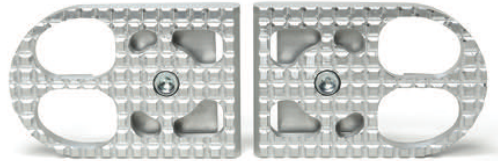

Qty.1 Left & 1 Right Billet Peg with wedges.

Step 1. Remove battery from bike.

Step 2. Remove side covers with #2 Phillips Screwdriver from both sides of bike. Keep these screws you will need them later.




Side Cover




Bike without side covers.

**Step 3. Remove both screws from floorboard.
You will not reuse these screws.**

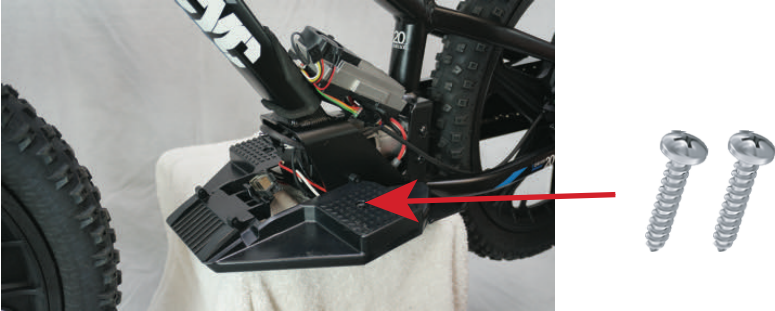


Step 4. Lift floorboard from the rear and slide forward to remove.

**Step 5. Lay bike on it's side and remove wedge plate,
pry it out with your fingers or flatblade screwdriver.**

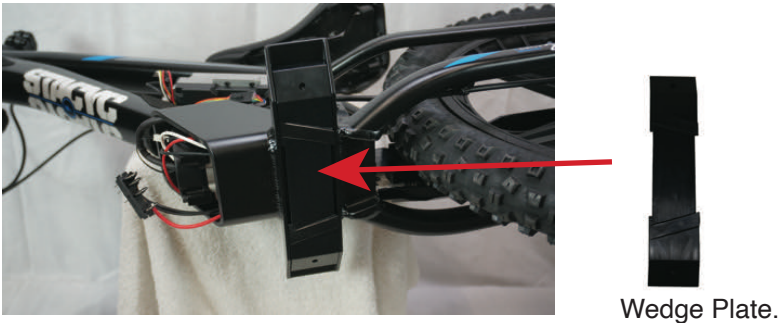

Wedge Plate.

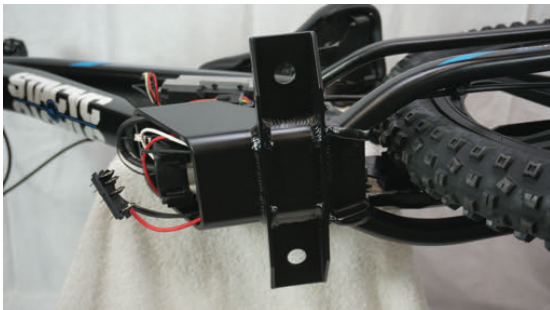

Bike without floorboard and wedge plate.


Step 6. Place your New! Billet foot peg on the top of the floorboard flange. Install 6mm bolt through the top hole in the footpeg. Bolt threads into wedge on bottom side. Tapered side of the wedge goes to the outside of the bike. Tighten with 5mm Allenwrench.



Step 6 cont. This is what the bottom side should look like after assembly with tapered wedge to the outside.



Step 7. With diagram provided below trim floorboard with hacksaw. Save center-piece for re-installing on bike.

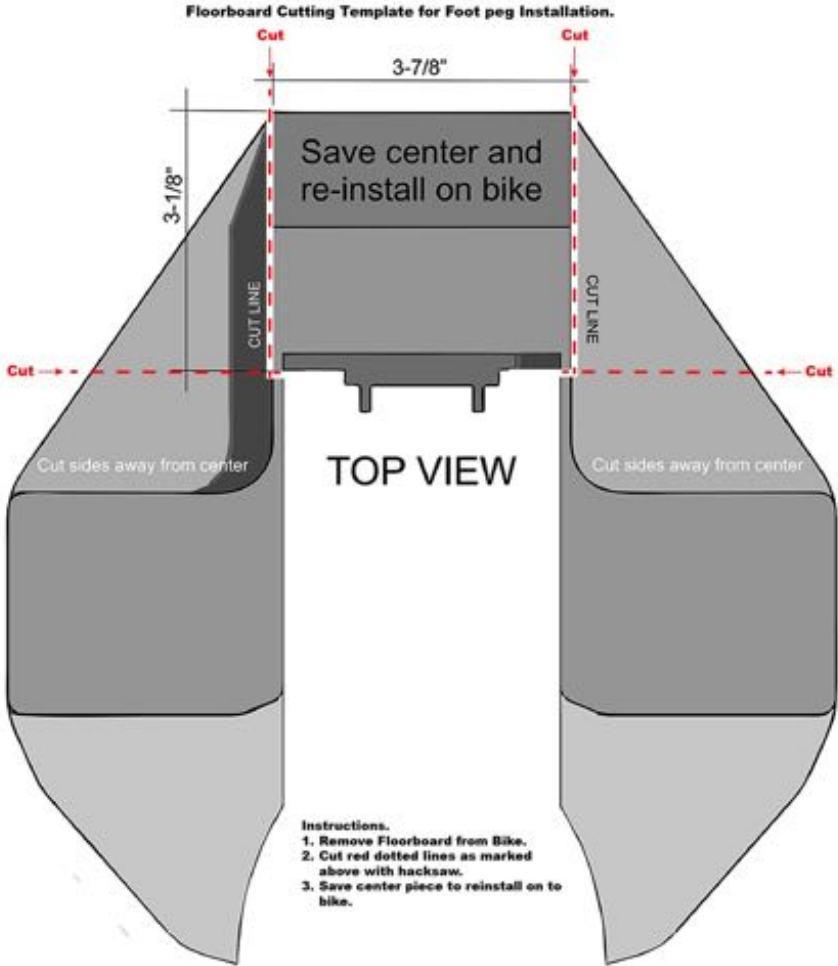

Finished trimmed center piece from floorboard. Use sandpaper on sides where cuts were made if desired to smooth finish.



Trimmed Center Piece from Floorboard

Step 8. Put side covers back on bike. Insert all screws but do not tighten. Leave covers loose so you can insert center piece and battery receptacle.



Warning: Be careful not to pinch wires from battery receptacle to speed controller when installing, make sure wires are not in the way of your screws and get pinched.

Step 9. Flip bike over and rest on seat and handlebars. Insert trimmed centerpiece and battery prong between side covers. Tighten screws on side panels.



Step 10. Install battery and Ride. Check to make sure foot-pegs are tight before every ride.



Scan for video of installation of Foot Pegs.



Scan for video of how to trim FloorBoard.

SAVE THESE INSTRUCTIONS

If you are **unhappy** with this product or have suggestions please contact us directly using the contact information below, so we can make it right.

We want you 100% satisfied!

If you are **pleased** with the product, and the transaction please review us on **Amazon** or our web page **hardlineproducts.com**

If you have a new product idea, but don't know how to bring it to market, Hardline Products® can help and pay you for your idea. Call or write us!

HARDLINE PRODUCTS®, INC.

8172 SW Jack James Drive.

Stuart, FL 34997

www.hardlineproducts.com

email: sales@hardlineproducts.com

toll free 888-413-8315

STACYC® and Nihilo® brands is property of their respective owner(s)
All company, product and service names used in this install guide and/or website are for identification purposes only.
Use of these names, logos and brands does not imply endorsement or affiliation with Hardline Products Inc.®